


# Installation Guide


## Mobile Acoustics

In response to the world's increasing demand for flexible and remote workspaces, Acoufelt have created a line of easy-install mobile acoustic solutions; Fast, Flexible and Functional.

1. Before removing your table divider from its packaging, ensure the surface you are installing onto is flat and free from loose objects and other fittings.
2. Measure your surface and ensure it is at least 38 inches (96cm's) long and 18 inches (45cm's) deep to be able to comfortably fit the divider.
3. Try to find a location for your divider that is away from any strong heat sources, such as fireplaces and stove tops.
4. To assemble your table divider, follow the below steps:
5. For L-Divider, slot component A into component B.

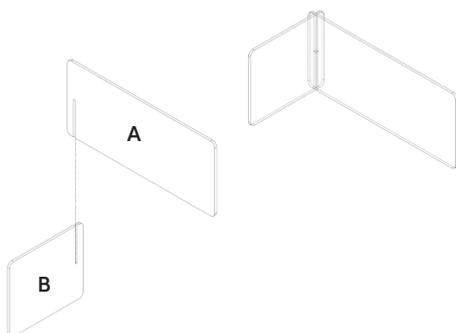

6. For U-Divider, slot component A into component B and C.

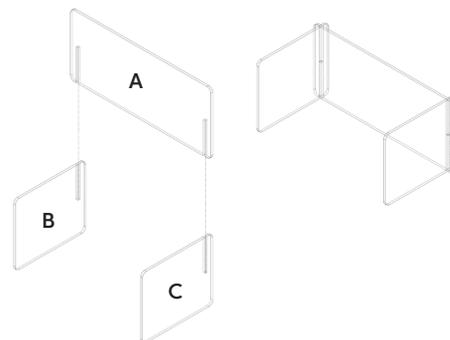

7. Once your divider has been assembled, place it on your desired work surface at least 2 inches (5cm) from all surface edges.

Your table divider should now be assembled and installed – it's that easy! You can disassemble, relocate and reassemble your divider as many times as necessary to find your perfect workspace.

Happy working!